





Spindle Warm-up

Learn how to run a spindle warm-up if not automatically prompted.

Written By: David Paul Farace

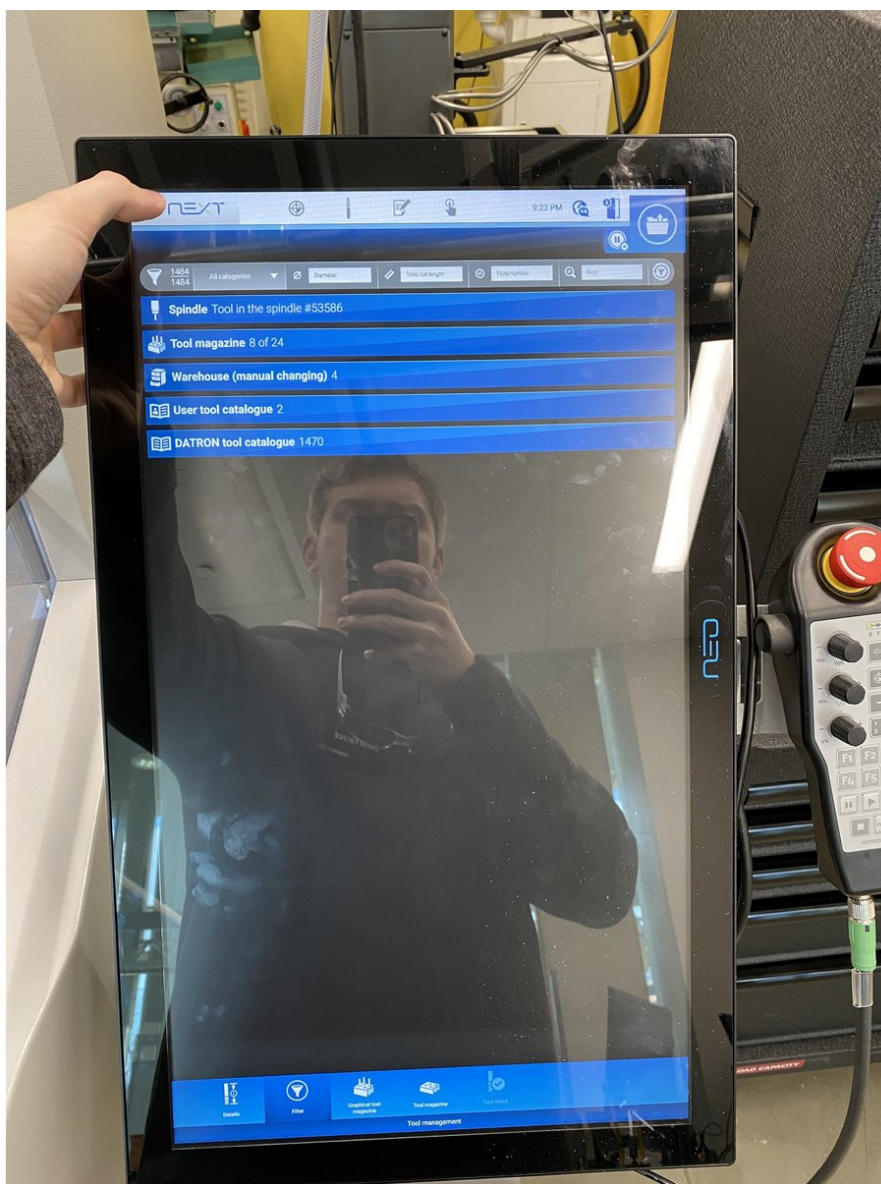

Step 1 — Spindle Warm-up

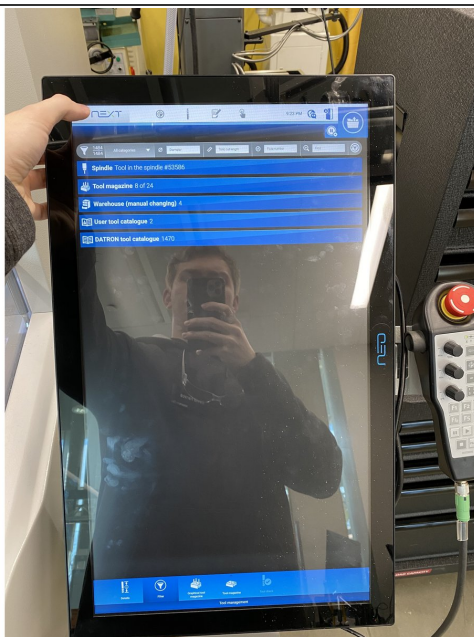


- If you are not in the home screen, click the next icon in the top left

Step 2




- Once in the home screen, click on manual operation as shown.
- Insert wisdom here.

Step 3 — Wrench Icon

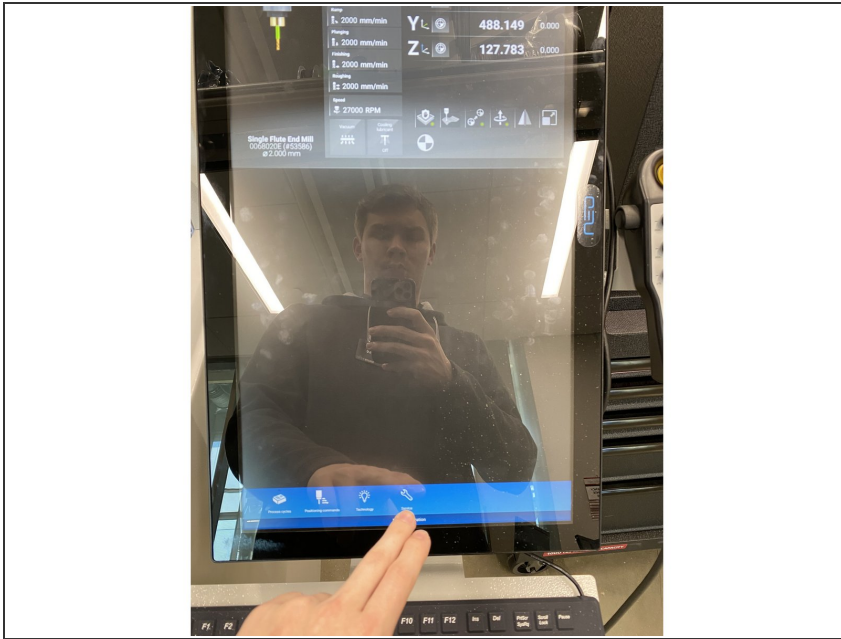


- Locate the wrench icon and click on it.

Step 4 — Spindle Warm-up Icon

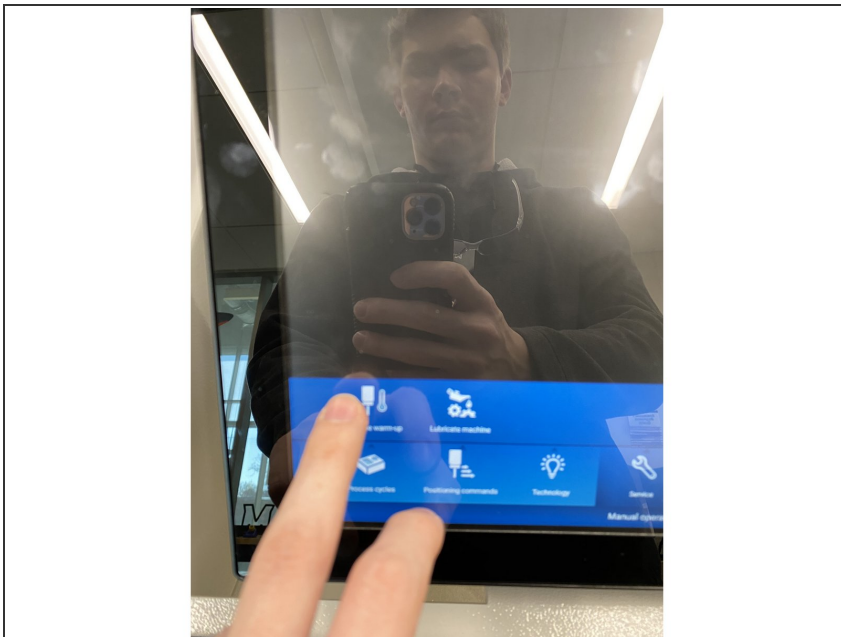

- Click on the spindle warm-up icon as shown.

Step 5 — Warm-up

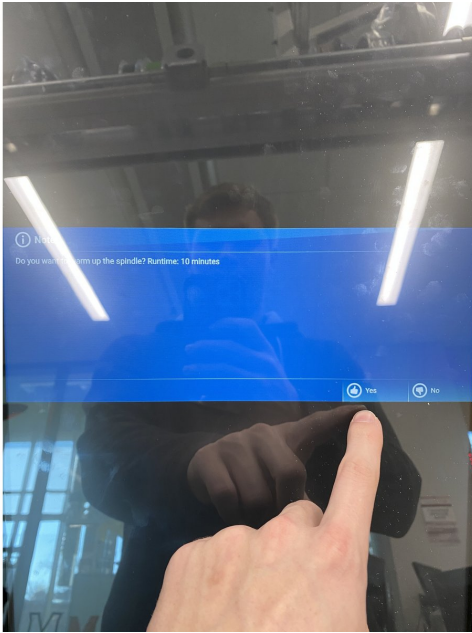

- Once this screen pops up, you can start the spindle warm-up.