



# Adjusting the Table


This guide will go over how to adjust the table.

Written By: Brian Shen



## Step 1 — Loosen the Table


---

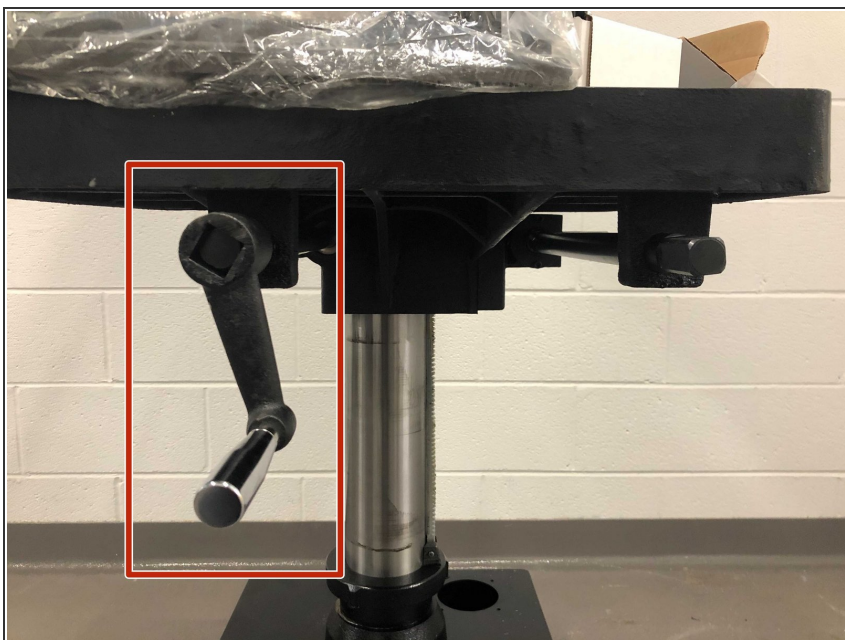

- Using the hand crank on the left bolt, rotate CCW to allow for adjustment
- The table should be able to pivot freely

## Step 2 — Adjusting the height

---

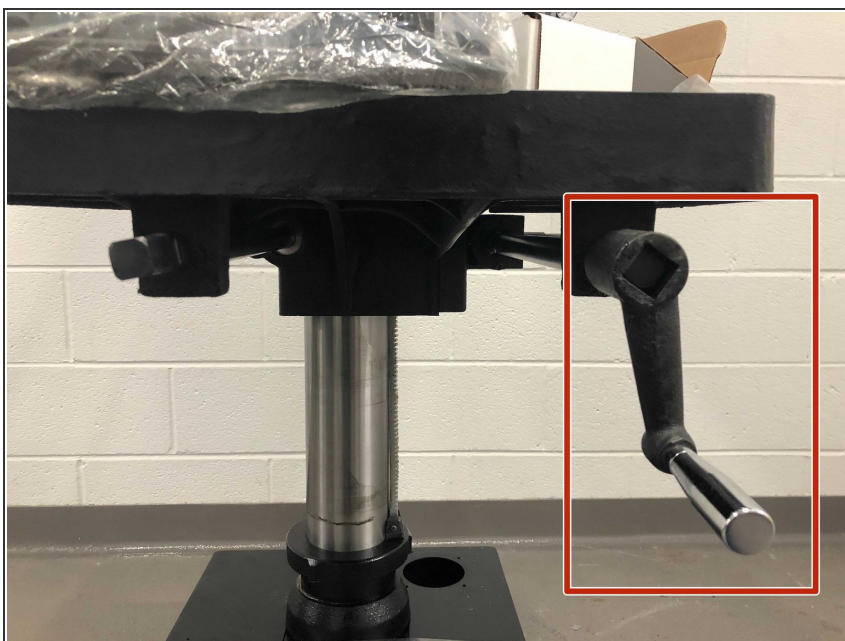

- Move the hand crank to the right bolt
- Rotate CW to raise the table and CCW to lower it

## Step 3 — Tighten the table

---



- Once desired height is reached, tighten the left bolt to lock the table height in place.